Installation and Assembly:
Medical Antimicrobial Laptop Arm

Model: ACC314-AB, ACC314-AW

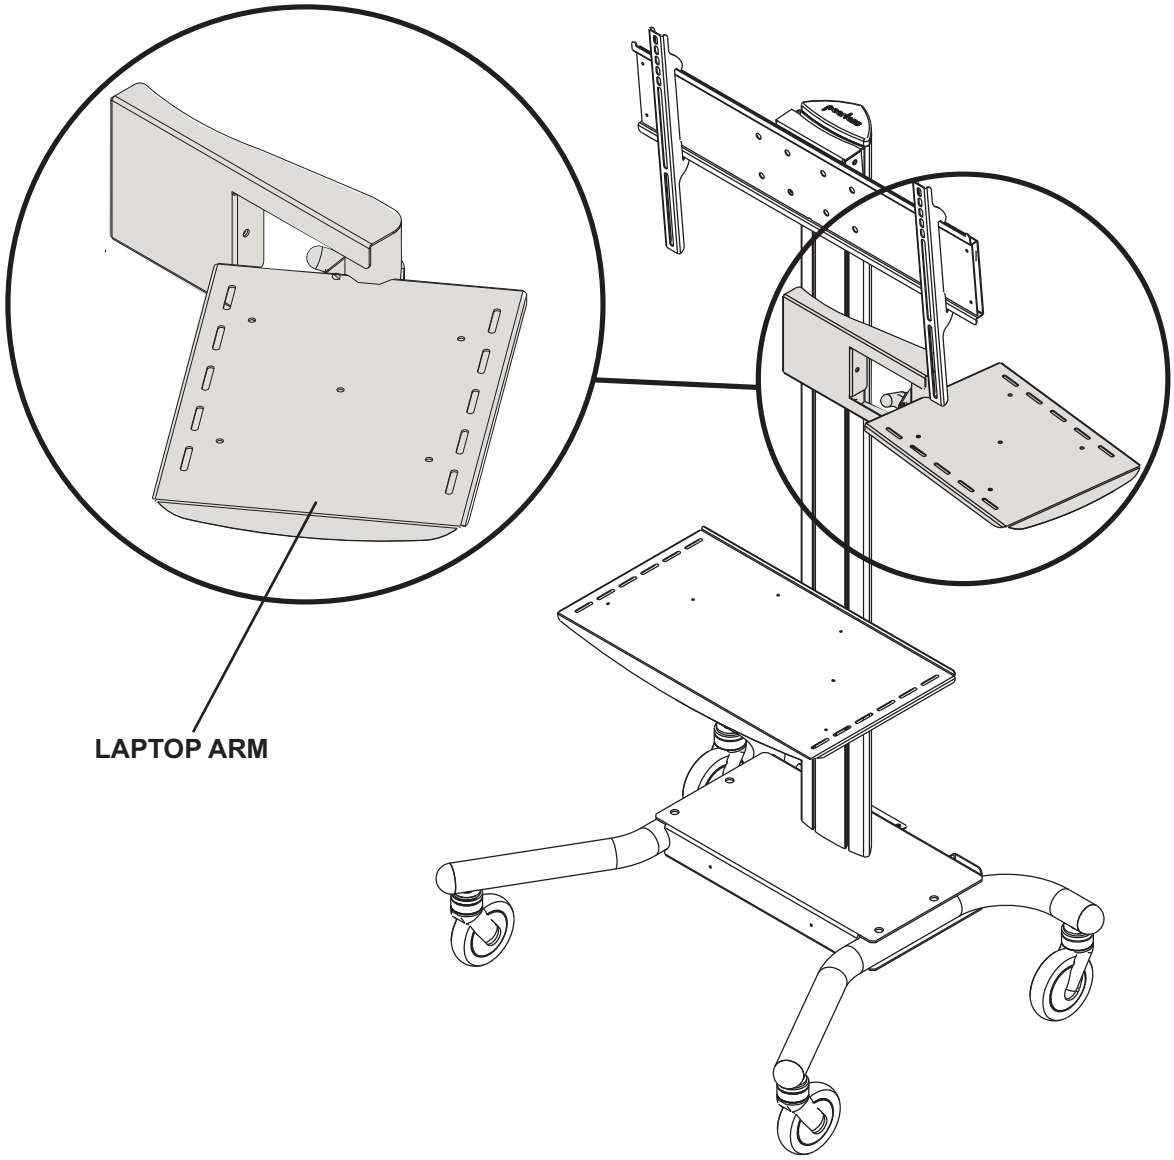

Features:

- Treated with Agion® antimicrobial finish in black or white designed to assist with infection control.

2300 White Oak Circle • Aurora, Il 60502 • (800) 865-2112 • Fax: (800) 359-6500 • www.peerlessmounts.com

ISSUED: 09-22-11 SHEET #: 009-9061-1

Before you begin, make sure all parts shown are included with your product.

Parts List

	Description	Qty.	ACC314-AB Part #	ACC314-AW Part #
A	laptop tray	1	009-S1227	009-S2227
B	laptop tray clamp	1	009-S1020	009-S2020
C	T-knob	1	590-1057	590-1057
D	1/4" - 20 x 1 3/4" carriage bolt	1	520-1017	520-1017
E	plastic grommet	2	590-1074	590-1074
F	screen mount bracket	1	201-S1156	201-S2156
G	shelf support	1	009-S1230	009-S2230
H	1/4 x 12 mm decorative screw	7	520-2325	520-2325
I	1/4 - 20 mm square nut	4	530-1050	530-1050
K	button bumper	5	590-1209	590-1209
L	allen wrench	1	560-9646	560-9646

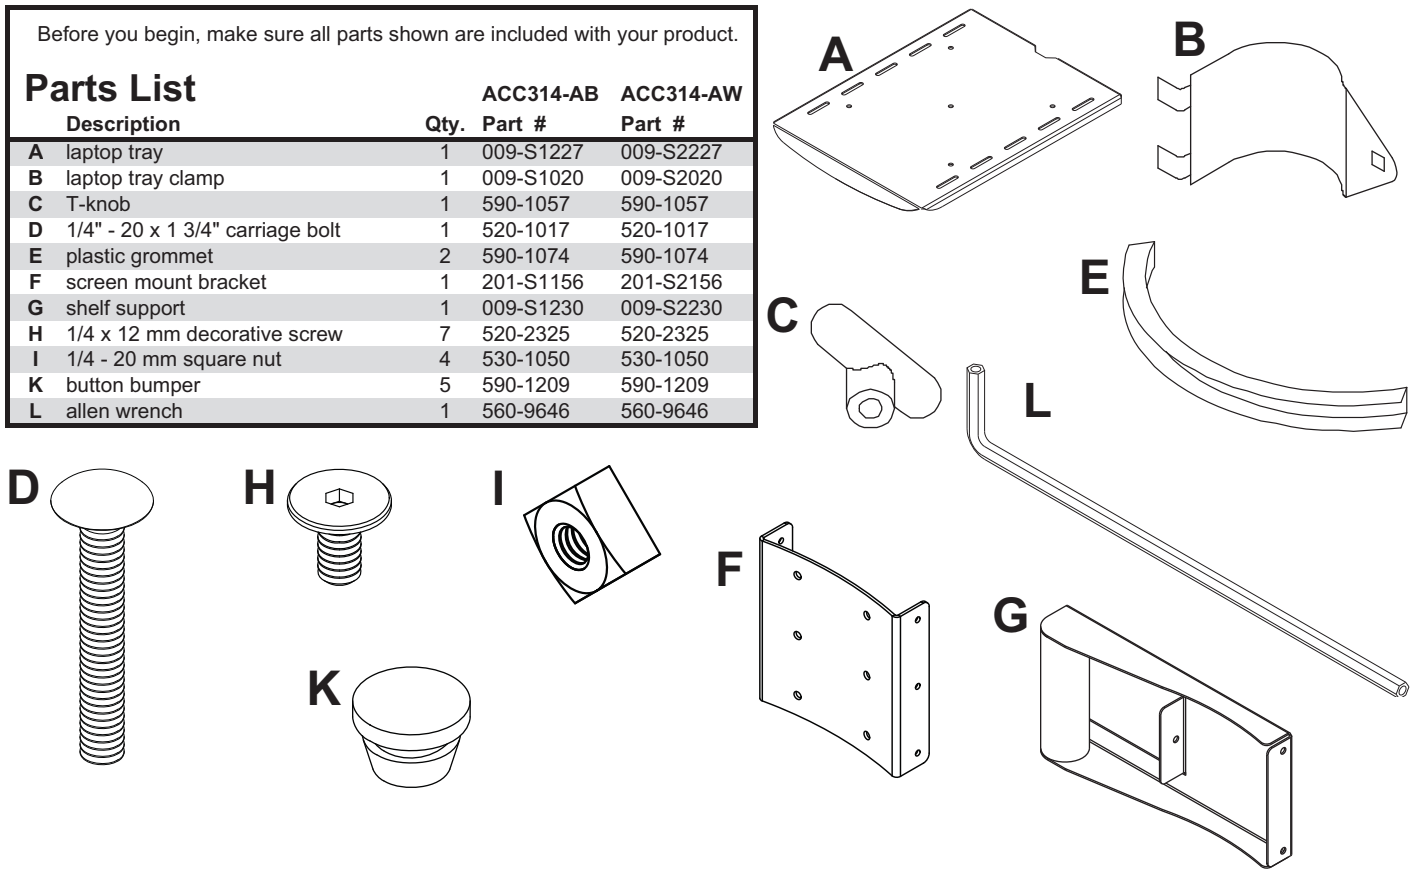

NOTE: If you are adding a new shelf to an already assembled product, reverse steps up to the shelf installation step (removing screen and adapter plate from cart) following the main instruction sheet.

1 Loosely attach four 1/4-20 x 12mm screws (**H**) and four 1/4-20 nuts (**I**) to screen mount bracket (**F**).

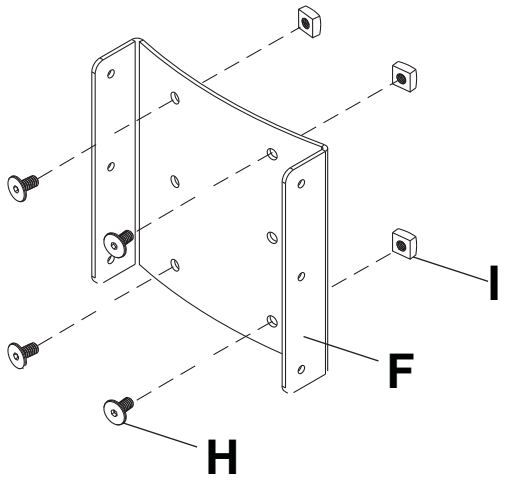

2 Slide screen mount bracket (**F**) onto upright so that 1/4-20 nuts (**I**) slide into slots of upright as shown in figure 2.1 and detail 1. Slide screen mount bracket to desired position, level, then tighten 1/4-20 x 12mm screws (**H**) using 4 mm allen wrench (**L**).

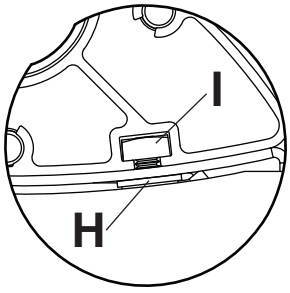

DETAIL 1

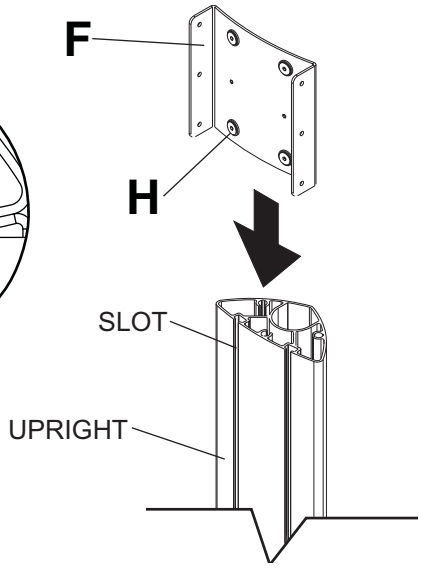

fig 2.1

3 Attach self support (**G**) to screen bracket bracket (**F**) as shown in fig. 3.1. Insert three 1/4-20 x 12 mm screws (**H**) into screen mount bracket (**F**).

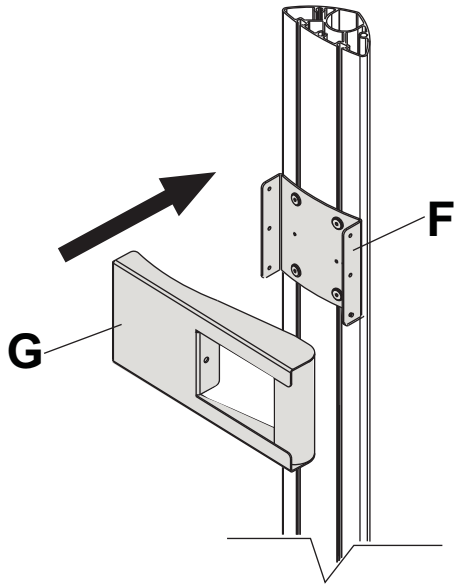

fig 3.1

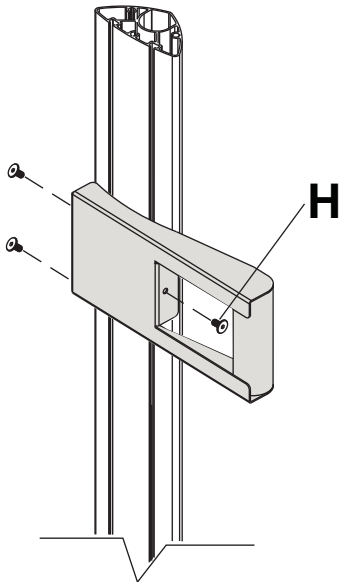

fig 3.2

4 Attach two grommets (**E**) to back of laptop tray (**A**), and attach five button bumpers (**K**) to the top of laptop tray (**A**) as shown below.

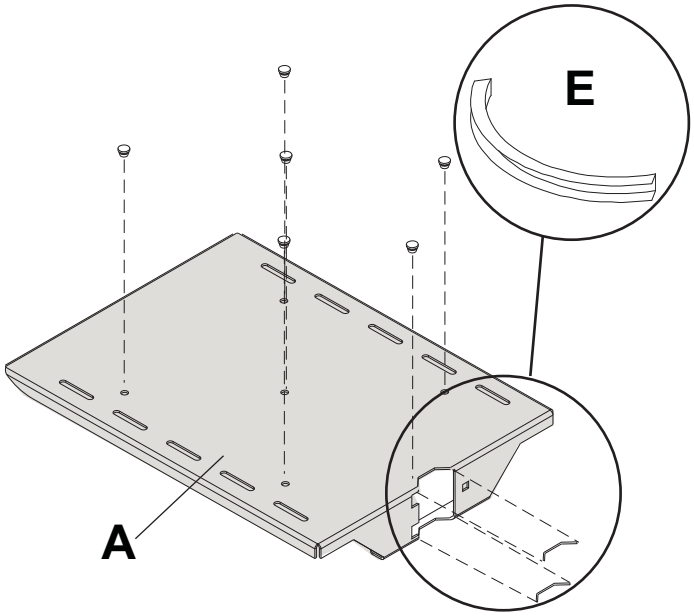

5 Attach laptop tray (**A**) to shelf support (**G**) using clamp (**B**), carriage bolt (**D**) and T-knob (**C**). Hook tabs of clamp (**B**) into slots of laptop tray (**A**) as shown in fig. 5.1, then secure clamp and tray around shelf using carriage bolt (**D**) and T-knob (**C**) as shown fig. 5.2.

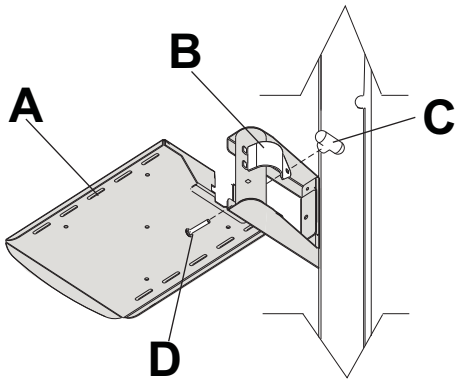

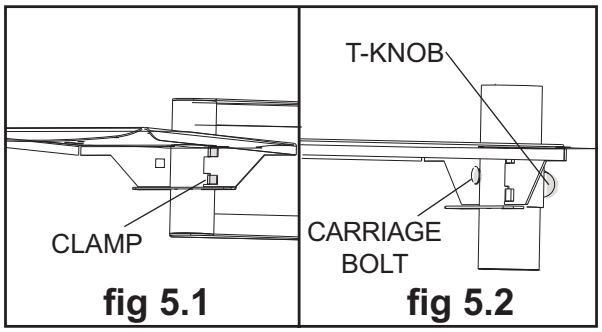

fig 5.1 fig 5.2

ISSUED: 09-22-11 SHEET #: 009-9061-1

Recommended Cleaning Guidelines

The following procedures are not guaranteed to control infection. An infection control administrator or epidemiologist should be consulted regarding cleaning procedures and processes.

Most painted components will withstand cleaning by commonly used, diluted, non-abrasive solutions such as quaternary ammonia compounds, ammonia enzyme cleaners, and bleach or alcohol solutions. However, it is recommended that any surface be tested in an inconspicuous area prior to determine the propensity for discoloration.

• Pen or permanent and dry erase markers can be removed with 91% isopropyl alcohol and a soft cloth.

• Iodine stains can be removed with commonly used cleaners and a soft cloth.

• Never use steel wool or other abrasive materials that will damage the surface finish.

• Do not use Acetone, mineral spirits, abrasive cleansers, paint thinner or any other harsh or toxic chemicals to clean your product. These solvents will damage the surface finish.

⚠ WARNING

- To avoid risk of electric shock, do not expose electrical components to water, cleaning solutions or other potentially corrosive liquids or substances.
- Do not use flammable cleaners on product surfaces due to close proximity of electrical power and equipment.

ISSUED: 09-22-11 SHEET #: 009-9061-1

© 2011, Peerless Industries, Inc. All rights reserved.
All other brand and product names are trademarks or registered trademarks of their respective owners.

Peerless Industries, Inc.
2300 White Oak Circle
Aurora, Il 60502
www.peerlessmounts.com